



# **TRBOnet Enterprise/PLUS**

# **Bluetooth-based Indoor Positioning**

User Guide Version 5.2

World HQ

Neocom Software 8th Line 29, Vasilyevsky Island St. Petersburg, 199004, Russia US Office Neocom Software 15200 Jog Road, Suite 202 Delray Beach, FL 33446, USA Internet

Email: info@trbonet.com WWW.TRBONET.COM Telephone EMEA: +44 203 608 0598 Americas: +1 872 222 8726 APAC: +61 28 6078325



# **Notices**

This document is for informational purposes only. Neocom Software offers no warranties, express or implied, in this document.

Neocom and the Neocom logo, TRBOnet and the TRBOnet logo are either registered trademarks or trademarks of Neocom Software, Ltd.

MOTOROLA, MOTO, MOTOROLA SOLUTIONS and the Stylized M logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC.

Intellectual property rights protect the voice coding technology embodied in this product including patent rights, copyrights and trade secrets of Digital Voice Systems, Inc. This voice coding technology is licensed solely for use within this communications equipment. U.S. Pat. Nos. 6,199,037, 5,870,405, 5,754,974, 5,664,051, 5,630,011, 5,517,511, 5,491,772, 5,247,579, 5,226,108, 5,226,084, 5,216,747 and 5,081,681.

Microsoft, Windows, SQL Server and the .NET logo are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other jurisdictions.

Other product or company names mentioned herein may be trademarks of their respective owners.

© 2017 by Neocom Software, Ltd. All rights reserved.

This document was last revised on November 15, 2017.



# Contents

1	Intro	oductio	on	1
	1.1	Abo	out This Guide	1
	1.2	Abo	out TRBOnet	1
	1.3	Cor	ntacts	1
2	Ove	erview.		2
	2.1	TRE	3Onet Indoor Positioning	2
	2.2	Sup	ported Transmitters	2
	2.3	Fun	ctional Architecture	2
	2.4	Fea	tures	3
	2.5	Har	dware and Software Requirements	4
	2.6	Rec	commendations on iBeacon Transmitters	5
	2.7	Abl	previations	5
3	Con	figurat	tion	6
	3.1	Rac	lio Configuration	6
		3.1.1	Non-Display Radios	8
	3.2	Ser	ver Configuration	9
		3.2.1	Applying a License with Indoor Positioning Support	9
		3.2.2	Verifying the Location Service	10
	3.3	Dis	patch Console Configuration	11
		3.3.1	Creating a GPS Profile	11
		3.3.2	Assigning a GPS Profile to Radios	13
		3.3.3	Preparing a Floor Map	14
		3.3.4	Placing Beacons on a Map	15
	3.4	Tes	t	



# **1** Introduction

# 1.1 About This Guide

This document is intended for administrators setting up evaluation and proof-ofconcept deployments of MOTOTRBO Dispatch over IP solutions. The document describes the minimum steps to configure the Bluetooth-based Indoor Positioning functionality of TRBOnet.

# 1.2 About TRBOnet

TRBOnet is a suite of professional applications for MOTOTRBO digital two-way radio networks. TRBOnet manages voice and data communication paths across network endpoints. It provides a unified graphical dispatcher workbench interface for the entire range of workforce fleet management tasks.

For more information about TRBOnet products, refer to our website.

## 1.3 Contacts

Region	Phone	Email & Support
EMEA	+44 203 608 0598	info@trbonet.com — general and commercial inquiries
Americas	+1 872 222 8726	support@trbonet.com — technical support
АРАС	+61 28 607 8325	<u>http://kb.trbonet.com</u> — online knowledge base



# 2 Overview

# 2.1 TRBOnet Indoor Positioning

Indoor Positioning is a TRBOnet functionality that allows a TRBOnet Dispatch Console operator to trace indoor location of a MOTOTRBO two-way radio in real time. TRBOnet identifies the location of a radio by constantly receiving information about the radio's proximity to the closest hardware transmitter (beacon) installed in the monitored area.

# 2.2 Supported Transmitters

TRBOnet Indoor Positioning works with new-generation Bluetooth LE (Low Energy) transmitters based on Apple's iBeacon technology.

Note: Though K-term beacon transmitters by Kilchherr Electronik are not in the scope of this document, they are supported. Documents discussing TRBOnet Indoor Positioning with K-term beacon transmitters can be provided by request.

## 2.3 Functional Architecture

The key components of a TRBOnet Bluetooth-based Indoor Positioning solution are iBeacon transmitters, preconfigured MOTOTRBO two-way radios, and TRBOnet software.



Figure 1: A Bluetooth-based Indoor Positioning solution

Beacons are installed in particular zones of the monitored area. Each beacon is assigned a set of identifiers and configured to broadcast this information to the range of up to 100 meters with regular time interval.



A broadcasted package consists of the following pieces of information:

- UUID: A 16-byte identifier used to differentiate a large group of related beacons.
- Major: A 2-byte identifier used to distinguish a smaller subset of beacons within a larger group.
- Minor: A 2-byte identifier used to identify individual beacons.
- TX Power: A hardcoded signal strength that is measured at one meter from a device. Devices use this value to determine their proximity to the beacon.

A MOTOTRBO two-way radio can be set up to hear beacons whose UUID are registered in the radio's configuration. At any moment, a radio can detect several beacons in close proximity. Information about the closest beacon is transmitted to TRBOnet on the radio channel.

The frequency of sending location data to the server and the package contents are configured on a per-radio basis. According to this configuration, a radio creates a package to transmit GPS data only, iBeacon data only, or both. Packages can be transmitted at regular time intervals and/or every time a radio enters an emergency mode of operation.

A Dispatch Console operator can see the real-time location of a radio on the floor map. TRBOnet can store location information, include it in predefined reports and provide them for retrospective analysis.

#### 2.4 Features

With TRBOnet Indoor Positioning, a MOTOTRBO network system gains a new instrument to reduce industrial risks, make indoor activities safer, and make activities of Dispatch Console operators and emergency services more efficient and more productive. The new network system capabilities include:

• Indoor positioning on emergency

When a radio feeds location data on entering the emergency mode, a Dispatch Console operator immediately sees the radio with alarm indication on the screen and reacts accordingly. Indoor positioning on emergency can be a recommended strategy where capacity of the radio channel is limited, there is a large number of radios in the network, and continuous location tracking is not a crucial requirement.

Combined indoor and outdoor positioning

Outdoor (GPS) and indoor positioning can be both activated on a radio to supplement each other, particularly, in GPS-only and beacon-only coverage zones. Combined positioning can be extremely useful when ongoing location tracking is required for activities running both indoors and outdoors.

• Real-time indoor positioning

When a radio feeds location data at a regular time interval, a Dispatch Console operator tracks the radio's location on the floor map in real time. This strategy is efficient when the channel capacity is sufficient for frequent transmissions, and when continuous location tracking of a radio is vitally important. For best



results, real-time indoor location can be combined with indoor location on emergency.

• 2D and 3D visualization of subscribers' locations

TRBOnet supports 2D and 3D floor maps on which physical beacons can be placed. When a radio feeds location data, a Dispatch Console operator can immediately see the closest beacon highlighted on the map and the radio and beacon names.

• Guard Tour

Guard Tour (a TRBOnet feature) can employ indoor positioning as an underlying service. In this configuration, indoor beacons serve as checkpoints on the patrolled area, and indoor positioning settings on a guard's radio define the list of beacons to be heard and conditions for location data to be transmitted. During a guard tour, a Dispatch Console operator monitors the progress on the floor map and in the **Active Routes** pane in real time.

• Reporting

TRBOnet supplies predefined reports **Visited Beacons** and **Beacon History** with advanced filtering capabilities to facilitate creation of well-structured location tracking documents with no effort.

• Show Route

A radio's location history can be presented on the floor map as a route where location points (beacons) are connected with a line. Alternatively, TRBOnet can show a history of location events (beacon detected, beacon lost) and visualization of each step on the floor map.

### 2.5 Hardware and Software Requirements

Table 1: TRBOnet Bluetooth-based Indoor Positioning - hardware and software requirements

Hardware/software	Requirements	
TRBOnet software	Version 5.0 and higher	
	A license with the Indoor Positioning option	
Two-way radio	MOTOTRBO Enhanced Portfolio (production: April 2016 and later)	
	Bluetooth 4.x (Low Energy) supported	
	Indoor Location Tracking license (MOTOROLA)	
Hardware transmitter	iBeacon technology	
	Vendor: any. Find more information in <u>Recommendations</u> on iBeacon Transmitters.	



# 2.6 Recommendations on iBeacon Transmitters

The Bluetooth LE infrastructure can be built on iBeacon transmitters of any preferred vendor. Estimote beacons (<u>estimote.com</u>) can be a recommended choice.

The typical characteristics of iBeacon transmitters are:

- Battery life: 2 years and more. Use the fleet management system provided by the iBeacon manufacturer for monitoring the remaining battery life.
- Signal range: up to 70 meters (230 feet)

## 2.7 Abbreviations

This section lists all abbreviations used in this document.

Term	Description
2D	Two-dimensional
3D	Three-dimensional
BMAP	Block Map (file format)
BMP	Bitmap Picture (file format)
CPS	Customer Programming Software
CSBK	Control Signaling Block
EID	Entitlement ID
GPS	Global Positioning System
ID	Identifier
JPEG	Joint Photographic Experts Group (file format)
LRRP	Location Request and Response Protocol
PNG	Portable Network Graphics (file format)
RSSI	Received Signal Strength Indicator
TIF	Tagged Image File (file format)
ТΧ	Transmission
UDP	User Datagram Protocol
UUID	Universally Unique Identifier

Tabla	ъ.	Abbrowistians
rable	Ζ.	Appreviations



# 3 Configuration

This section describes how to configure TRBOnet software and MOTOTRBO radios for using TRBOnet Indoor Positioning.

# 3.1 Radio Configuration

To prepare a MOTOTRBO two-way radio for Bluetooth-based Indoor Positioning, activate the Indoor Location Tracking license and modify the radio's configuration as described below. You can do it in MOTOTRBO CPS or in the Radio Management software.

#### To configure a MOTOTRBO radio for Bluetooth-based Indoor Positioning:

- 1. Power off the radio and connect it to the computer. Power the connected radio.
- 2. Launch the MOTOTRBO CPS application on the computer.
- 3. Open the configuration of your radio in MOTOTRBO CPS by clicking the **Read** toolbar button, or by selecting **Device** and then **Read** in the application menu.



Figure 2: Opening the configuration of the connected radio in MOTOTRBO CPS

- 4. Register and activate the Indoor Location Tracking feature on your radio.
  - a) To register the purchased feature, select **Features** and **Register Device Features** in the menu.



Figure 3: Registering the purchased feature on the radio

In the wizard, enter the EID and click **Next**. Select the Indoor Location Tracking feature from the list and click **Next**. Enter the serial number of your radio and click **Register**.

Note: To obtain the EID, contact your dealer or a MOTOROLA sales representative.

 b) To activate the registered feature on your radio, select Features and Activate Device Features in the menu. In the wizard, click Next and again Next. Select the Indoor Location Tracking feature for the registered radio and click Activate.



5. In the left pane, select **Network**. In the right panel, click **Bluetooth** and select the **Enable** checkbox to enable the Bluetooth feature on the radio.

<b></b>	MOTOTRBO Customer Programming Software – 🗖 🗙
File Edit View Device	Features       Remote       Window       Help         Image: Second Content of Content Con
	Untitled1
DP4800e	Network
Accessories	Top Radio Network Services Control Station IP Site Connect Bluetooth Bluetooth S
Text Messag	USB HID Data Routing
Menu	Bluetooth
Security	Enable 🔽
Announceme	Country Code Channel 79 Channels
Indoor Locat	Reconnect TOT (min) 2
	Device Database Erase On Power Up
Encoder	DNS-SD Interval Disabled

Figure 4: Enabling the Bluetooth feature on the radio

6. In the left pane, select **Indoor Location**. In the right panel, select the **Indoor Location** checkbox to enable the respective feature on the radio.

Ħ	MOTOTRBO Customer Programming Software		
File Edit View Device Featur	es <u>R</u> emote <u>W</u> indow <u>H</u> elp		
	Untitled1		
DP4800e	Indoor Location		
Accessories	Top Beacon Alias		
Text Messages	Indoor Location		
Menu	Scan Interval on Time (ms) 8000 +		
Security	Scan Interval off Time (ms) 8000		
المعنى Network سوي) Announcement	Reacon Alias		
Indoor Location			
E Signaling Systems	Add Dejete		
Encoder	Bescon Alise Bescon IIIID		
	Anchor1 F7826DA64FA24E988024BC5B71E0893E		
	Anchor2 000000000000000000000000000000000000		
E Channels			

Figure 5: Enabling the Indoor Location feature and adding beacons

The **Add** and **Delete** buttons in the **Beacon Alias** section become available. The table shows all beacons registered on the radio.

7. To add a new iBeacon, click the **Add** button. In the line added at the bottom of the table, double-click the default text and type the preferred beacon alias and the UUID value.



8. In the left pane, select **Menu**. In the right pane, select **Utilities** and select the **Indoor Location** checkbox to activate the Indoor Location menu on the radio.



Figure 6: Activating the Indoor Location menu item on the radio

- 9. Click the **Write** toolbar button or select **Device** and **Write** in the application menu to load the updated configuration to the radio.
- 10. Power off the radio and disconnect it from the computer.

#### **Radio Configuration Test**



# To ensure that the updated configuration works properly:

- 1. Power the radio and bring it close to any physical beacon registered on the radio.
- 2. In the **Main Menu** of the radio, select **Bluetooth**. In this menu section:
  - a) Go to **My Status** and select **On** to activate Bluetooth on the radio.
  - b) Go to Indoor Location and select Enabled. Then select Beacons.

All detected beacons appear on the display, each with the UUID and Major and Minor identifiers.

Figure 7: Detected beacons

#### 3.1.1 Non-Display Radios

For radios that do not have a display, you have to manually switch on the Indoor Location feature every time you restart the radio. For this purpose, assign a dedicated button on the radio (*MOTOTRBO CPS* > *Buttons* > *Short/Long Press* > *Indoor Location On/Off*). In addition, you can add an appropriate voice announcement to be sure the Indoor Location feature is on.



# 3.2 Server Configuration

This section describes how to configure Indoor Positioning in TRBOnet Server.

Table 3: High-level steps for configuring Indoor Positioning on TRBOnet Server

#	High-level steps	Refer to
1	Launch TRBOnet Server by clicking the shortcut on the Windows desktop.	
2	Apply a license with Indoor Positioning support.	Applying a License with Indoor Positioning Support
3	Verify the status of the GPS Location service.	Verifying the Location Service

After the server-side configuration is finished, you need to specify several settings in the Dispatch Console as described in section <u>Dispatch Console Configuration</u> of this guide.

#### 3.2.1 Applying a License with Indoor Positioning Support

TRBOnet Indoor Positioning requires a TRBOnet license with the Indoor Positioning option.

#### To check if your license supports Indoor Positioning:

- 1. In Dispatch Console, click the **Administration** tab in the left pane.
- 2. In the **Administration** pane, select **License** from the tree.
- 3. In the right pane, find **Indoor Positioning** under the **List of available features**.

If this option is not included, contact your sales representative to obtain a license with Indoor Positioning support.

#### To apply a new license:

- 1. Copy the new license file to a local folder. If this folder contains other license files, delete them.
- 2. Launch TRBOnet Server. In the configuration window, select **License** in the left pane.
- 3. Click the License Manager link in the right pane.
- 4. In the **License Manager** window, follow the instructions and select the new license file from the local folder.
- 5. Click **Finish** to close the wizard.
- 6. Click **Apply** and confirm to restart TRBOnet Server.



## 3.2.2 Verifying the Location Service

TRBOnet Indoor Positioning requires the Location service to be enabled.

#### To verify the status of the Location service:

- 1. Launch TRBOnet Server.
- 2. In the **Configuration** pane, select **Radio Networks**. The **Enable Radio Networks** option must be selected in the right pane.



Figure 8: The Radio Networks are enabled

3. In the **Configuration** pane, select **Services** under **Radio Networks** and **Digital services**. In the right pane, the **Location service (GPS / Indoor)** option must be selected.

Configuration		Services			Version: 5.2.0.1356
🛱 Redundancy	^				^
Database		🗹 Automatic R	egistration service (	(ARS)	
😪 Reports		Port:	4005	<b>1</b>	
Service Management		_			
💥 Advanced settings		🗹 Telemetry se	ervice (TLM)		
Geocoding Servers		Port:	4008	÷	
Radio Networks		Text Messar	ing service (TMS)		
		Y Text Heady	ing service (11-15)		
		Port:	4007	Ŧ	
Services		Location ser	vice (GPS / Indoor)		
Capacity MAX 1		Port:	4001	<u>_</u>	
Analog Control Stations		🗌 Jah Tiskatian			
Remote Agents		V JOD HCKeung	J service (JTS)		
Friendly Servers		Port:	4013	÷	
Telephony Telephony		Text Messac	ing service DMR		
				A	
Thernal PBX Server		Port:	5016	Ψ	
Advanced settings		Indoor servi	ce (K-TERM)		
↓ Data Sources		Port:	3022	<u> </u>	
🌟 Modbus TCP	¥			· · ·	×
Set Defaults				Apply	OK Cancel

Figure 9: The GPS Location service is enabled

4. If you have made any changes, click **Apply** and confirm to restart TRBOnet Server.



# **3.3 Dispatch Console Configuration**

This section describes how to configure Bluetooth-based Indoor Positioning in TRBOnet Dispatch Console.

Table 4: High-level steps for enabling iBeacon-based indoor positioning in TRBOnet Dispatch Console

#	High-level steps	Refer to:
1	Launch Dispatch Console by clicking the shortcut on the Windows desktop.	
2	Create GPS profiles.	Creating a GPS Profile
3	Assign a GPS profile to each radio.	Assigning a GPS Profile to Radios
4	Prepare a floor map.	Preparing a Floor Map
5	Place beacons on the floor map.	Placing Beacons on a Map

## 3.3.1 Creating a GPS Profile

A GPS profile defines the rules for sending GPS and/or iBeacon information from a radio to TRBOnet Server. You need at least one GPS profile with iBeacon support.

#### To create a GPS profile:

- 1. In Dispatch Console, click the **Administration** tab in the left pane.
- 2. In the Administration pane, select GPS Profile in the tree.
- 3. To add a profile, click **Add** in the right pane. In the **GPS Profile** dialog box, select **MOTOTRBO** in the **GPS type** menu. Specify the profile name and click **OK**.

GPS Profile		×
GPS type: Profile name:	MOTOTRBO	•
GPS & iBeacon		
	ОК	Cancel

Figure 10: Creating a GPS profile

4. In the **GPS Profile** dialog box, modify the default GPS profile settings where needed.



PS Profile X					
Name:	GPS & iBeacon				
Description:					
	×				
🔽 Save GPS data to dat	tabase				
🗌 Manage trigger manu	ally				
GPS channel type:	Scheduled (Enhanced GPS over Data Revert Channel)				
GPS Priority:	Beacon				
GPS data:	Latitude, Longitude, Precision, Direction				
🔽 iBeacon data:	Major, Minor				
Number of iBeacons:	1 *				
Fast GPS on Connect	Plus systems				
Periodic trigger					
Interval:	30,0 • second				
Distance trigger					
Distance:	1000 meters				
Min. interval:	10 second				
Telemetry trigger					
Emergency trigger					
Show emergency	mode for Radio when Emergency GPS message is received				
	OK Cancel				

Figure 11: GPS profile settings

The following settings are important for sending iBeacon data:

- **GPS Channel type**: In the menu, select a radio channel for sending location data to TRBOnet Server:
  - Non-scheduled (Regular GPS over Voice or Data Revert Channel)
  - Scheduled (Enhanced GPS over Data Revert Channel)

WARNING: Because of the LRRP protocol limitations, CSBK options should not be selected for iBeacon data transfer. The **Fast GPS on Connect Plus systems** option should not be selected for the same reason.

- iBeacon data: Select this check box to enable sending iBeacon data to TRBOnet Server. In the menu, select iBeacon data to be included in a packet:
  - Major, Minor (always included)
  - UUID
  - TX Power, RSSI
- Periodic trigger: Select this check box to set a periodic GPS trigger on a radio. The trigger initiates the radio to send GPS and/or iBeacon data at the specified time interval.
- Interval: Specify the time interval (in seconds) for the periodic trigger.



- Emergency trigger: Check this box for a radio to send GPS and/or iBeacon data when entering the emergency mode. Optionally, select the Show emergency mode option if you want a Dispatch Console operator to see the emergency status of a radio that transmitted location data.
- 5. If you have selected the **Scheduled** option for **GPS channel type**, click the "calculator" icon next to the **GPS data** field or **iBeacon data** field.

GPS System Planner			×
Requested GPS Data:			<b>^</b>
Precision     Direction			-
iBeacon count in packet:	1 •		
Enhanced GPS Calcu	ılator		
Compressed UDP Header			
Enhanced Privacy			
Window Reservation:	90%		
Window Size:	6		
Number of GPS Packages:	150 per Minute per Slot		
		OK	Cancel

Figure 12: Calculating the window size for GPS data transfer

In the **GPS System Planner** dialog box, specify GPS and iBeacon data to be included in a package. The actual window size and the capacity of the Enhanced GPS Revert channel are recalculated as you change the package attributes.

WARNING: To prevent unexpected results of sending location data, make sure that all repeaters and subscribers in the system with Enhanced GPS feature are configured to use the same window size. To learn more about configuring Enhanced GPS in different system topologies, refer to MOTOTRBO System Planner.

6. Click **OK**. The newly created GPS profile appears under the **GPS Profile** section in the left pane.

### 3.3.2 Assigning a GPS Profile to Radios

Assign a GPS profile with iBeacon support to each radio that should send iBeacon information to TRBOnet Server.

#### To assign a GPS profile to a radio:

- 1. In Dispatch Console, click the **Administration** tab in the left pane.
- 2. In the **Administration** pane, select **Radios** from the tree.
- 3. Select a desired radio in the list and click Edit in the right pane.
- 4. In the dialog box, select the **General** tab. If advanced settings are collapsed, click **Show Advanced Settings**.



5. In the **Location Service** section, expand the **GPS Profile** drop-down list and select the preferred profile with iBeacon support.

Voice Dispatch Admin				
General Logical Groups Additional SIP Call				
Callsign:	Admin			
Radio ID:	1 MDC / Sel-5 (Hex): 0	•		
Radio Groups:	support V	•		
Use icon:	🛞 Portable Radios	✓		
Extended Device:	None V Test	]		
Location Service				
GPS Source:	Built-in GPS receiver	✓		
GPS Profile:	GPS & iBeacon	•		
	(Default)			
Telemetry Servi	GPS & iBeacon GPS only			
TLM Source:	Built-in Telemetry	$\overline{}$		
TLM Profile:	(Default) V	•		
Text Messages Service				
TMS Source:	Built-in Text Messages	~		
Hide Advanced Settings				
	OK Cance	el		

Figure 13: Updating a radio profile

- Note: Alternatively, click the "plus" button next to the **GPS Profile** box and create a new GPS profile as described in <u>Creating a</u> <u>GPS Profile</u>. When you click OK, a just created GPS profile is assigned to the radio and appears in the **GPS Profile** box.
- 6. Select option **GPS Enabled**. This option enables TRBOnet Server to send GPS triggers to a radio.
- 7. Click **OK**.

#### 3.3.3 Preparing a Floor Map

TRBOnet Dispatch Console supports 2D and 3D floor maps to let you visualize the location of each beacon on the monitored territory.

- A 2D map is a BMAP file that you can generate from an image file in TRBOnet Dispatch Console.
- A 3D map is an X (DirectX) file that you can create using third-party software.

#### To create a 2D map:

- 1. Place an image file with a floor map in a local folder. Dispatch Console can work with many image formats, including JPEG, PNG, TIF, and BMP.
- 2. In Dispatch Console, click the **Administration** tab in the left pane.
- 3. In the Administration pane, expand Tools and select Indoor 2D Map Converter in the tree.
- 4. In the right pane, specify the following parameters:



- **Name**: The preferred name of the map.
- **Image**: The full path of the source image file.
- **Directory**: The full path of the folder where the generated map is located.
- 5. Click Start.

#### 3.3.4 Placing Beacons on a Map

Open a floor map in TRBOnet Dispatch Console and indicate the location of each beacon on the map.

#### To open a floor map:

- 1. In TRBOnet Dispatch Console, click the **Location Tracking** tab in the left pane.
- 2. In the application menu, select **Map** and **Open New Map in Tab** to open a floor map in the right pane. Or, select **Open New Map in Window** to open a floor map in a separate window.
- 3. In the Select Map dialog box, specify the following parameters:
  - Map Type: Select Beacon 2D or Beacon 3D, depending on the type of your floor map.
  - **Caption**: Specify the name of your floor map to be displayed in the tab header.
  - Available Maps: Select the preferred map to activate the OK button. Click OK.

Note: If you cannot find your map in the list, click **Add** and select the image file of the preferred map in the system dialog box. The selected map appears in the list.

	Select Map	×
Map Type:	Beacon2D	~
Caption:	City Mall	
Available Maps		
Name	Path	State
Schematic	C: \Temp \MapSample \Schematic.bmap	OK
showroom	C:\Temp\Apartment\apartment.bmap	OK
Shopping_Mall	C: \Temp \Shopping Mall \Shopping_Mall.bmap	OK
Add	Remove OK	Cancel

- Figure 14: Selecting a floor map
- 4. Click **OK**. A new tab with the selected floor map appears in the right pane.





Figure 15: 2D floor map

You can adjust the view of your map as follows:

- To zoom in/out your map, scroll the mouse wheel.
- To pan a 2D map, click the map area and move the mouse cursor, keeping the primary mouse button pressed.
- To pan a 3D map, click the map area and move the mouse cursor, keeping the secondary mouse button pressed.
- To rotate a 3D map, click the map area and move the mouse cursor, keeping the primary mouse button pressed.
- To display the map with its original size and position, click the **Overview** button in the control bar.

#### To place beacons on a map:

- 1. In the right pane, select the tab with the preferred floor map.
- 2. To add a new beacon to the map, expand the list of beacons on the toolbar and select **New Beacon...**. To place an existing beacon, click it in the list.
- 3. Click the **(Set Location**) button. The shape of the mouse cursor changes.
- 4. Click on the map to point the location of a physical beacon on the floor.
- 5. (Optional) If you add a new beacon, the **Beacon properties** window appears.



Beacon properties ×				
General Logical Groups				
Type: Name: Major ID: Minor ID: Description:	Beacon       Coffee       27       22       Coffee shop /2nd floor/			
	OK Cancel			

Figure 16: Specifying beacon properties

- a) Select **iBeacon** in the **Type** menu.
- b) Specify any descriptive name to identify the beacon.
- c) Enter the beacon's major and minor ID exactly as specified on the iBeacon device.
- d) Click **OK**. A new beacon with the specified name appears on the map.

You can edit beacons on the map as follows:

- To relocate a beacon on the map, right-click it and select **Set Location** in the context menu. Then point the desired location on the map.
- To edit properties of a beacon, double-click that beacon on the map or in the **Beacons** pane. Modify the properties in the **Beacon properties** window and click **OK**.
- To delete a beacon from the map, right-click it and select **Delete from the Map** in the context menu.

Note: The deleted beacon is not linked to a map but is still displayed in the **Beacons** pane.

• To completely remove a beacon, right-click it in the **Objects** pane and select **Remove Object** in the context menu.



#### 3.4 Test

Power on your radio configured for Bluetooth-based Indoor Positioning. Launch TRBOnet Dispatch Console and select **Location Tracking** in the navigation pane.

If all configuration settings are correct, the following happens:

1. In a few minutes, TRBOnet identifies the radio in the network and displays its status as Radio Online. This happens automatically, no action on the radio is required.

Note: The identification time is three times the <u>periodic trigger</u> <u>interval</u> specified in the GPS profile assigned to the radio.

- 2. TRBOnet sends the GPS Start request to the radio.
- 3. The radio starts to report its own location GPS data, or iBeacon data, or both as specified in the linked GPS profile.
- 4. On the floor map, the closest beacon detected by the radio is displayed in the yellow color, indicating the radio's location. The value in brackets indicates the number of radios currently located by the yellow beacon. Beacons displayed in the blue color do not locate any radios.



Figure 17: A radio detects the closest beacon on a 3D map