

TRBOnet Enterprise/PLUS

Geofencing

User Guide

Version 5.7

World HQ
Neocom Software
8th Line 29, Vasilyevsky Island
St. Petersburg, 199004, Russia

US Office
Neocom Software
15200 Jog Road, Suite 202
Delray Beach, FL 33446, USA

Internet
Email: info@trbonet.com
WWW.TRBONET.COM

Telephone
EMEA: +44 203 608 0598
Americas: +1 872 222 8726
APAC: +61 28 6078325

Notices

This document is for informational purposes only. Neocom Software offers no warranties, express or implied, in this document.

Neocom and the Neocom logo, TRBOnet and the TRBOnet logo are either registered trademarks or trademarks of Neocom Software, Ltd.

MOTOROLA, MOTO, MOTOROLA SOLUTIONS and the Stylized M logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC.

Intellectual property rights protect the voice coding technology embodied in this product including patent rights, copyrights and trade secrets of Digital Voice Systems, Inc. This voice coding technology is licensed solely for use within this communications equipment. U.S. Pat. Nos. 6,199,037, 5,870,405, 5,754,974, 5,664,051, 5,630,011, 5,517,511, 5,491,772, 5,247,579, 5,226,108, 5,226,084, 5,216,747 and 5,081,681.

Microsoft, Windows, SQL Server and the .NET logo are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other jurisdictions.

Other product or company names mentioned herein may be trademarks of their respective owners.

© 2020 by Neocom Software, Ltd. All rights reserved.

This document was last revised on December 18, 2020.

Contents

1	Introduction.....	1
1.1	About This Guide.....	1
1.2	About TRBOnet.....	1
1.3	Contacts	1
2	Overview	2
3	Operation.....	3
3.1	Drawing Regions.....	3
3.1.1	Drawing a Polygonal Region.....	3
3.1.2	Drawing a Circular Region	4
3.1.3	Drawing a Route.....	6
3.2	Defining Geofencing Rules	7
3.3	Activating Geofencing Rules	15

1 Introduction

1.1 About This Guide

This document is intended for administrators setting up evaluation and proof-of-concept deployments of MOTOTRBO Dispatch over IP solutions. The document describes how to configure and use the Geofencing feature.

1.2 About TRBOnet

TRBOnet is a suite of professional applications for MOTOTRBO digital two-way radio networks. TRBOnet manages voice and data communication paths across network endpoints. It provides a unified graphical dispatcher workbench interface for the entire range of workforce fleet management tasks.

For more information about TRBOnet products, refer to our [website](#).

1.3 Contacts

Region	Phone	Email & Support
EMEA	+44 203 608 0598	info@trbonet.com — general and commercial inquiries
Americas	+1 872 222 8726	support@trbonet.com — technical support
APAC	+61 28 607 8325	https://trbonet.com/kb/ — online knowledge base

2 Overview

The Geofencing feature in the TRBOnet Location Tracking module is designed for implementing various motion and location-based subscriber management rules. In the outdoor GPS-based scenario, the two types of source events for triggering response actions are:

- **Enter/exit a region**

The next consecutive GPS fix from a subscriber is beyond a user-defined perimeter.

- **Speed above/below a threshold**

A subscriber accelerates, slows down or remains stationary over a user-defined limit.

A geofencing rule definition in TRBOnet can combine both location and motion data received from a radio station to target the managed subscribers as broadly or narrowly as required.

3 Operation



This section describes how to draw map regions and specify region-based geofencing rules.


3.1 Drawing Regions

In TRBOnet Dispatch Console, you can draw polygonal regions, circular regions, and routes.

3.1.1 Drawing a Polygonal Region

3.1.1.1 Draw a polygonal region manually

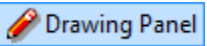- On the Map toolbar, click  **Drawing Panel**.
- On the Drawing toolbar, click  and choose **Draw on the map**.
- Left-click points on the map to create the polygonal region.

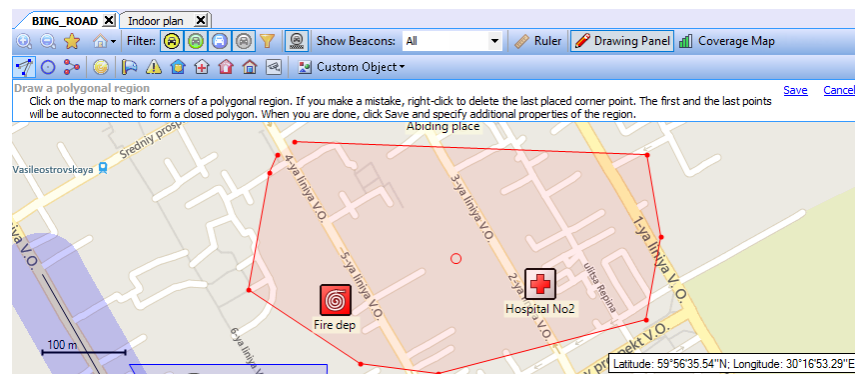

- Once finished, click the **Save** link.
In the **Object on Map** dialog box that opens, specify the following parameters:

General tab

- **Name**
Specify a name for the map region.
- **ID**
Enter the ID of the map region.
- **Description**
Enter a description for the map region.


Region tab


- **Color**
Select a color to display the region on the map.
- **Fill region area**
Select this check box to fill in the region area on the map.
- **Transparency**
Specify the transparency level (in percent) for the fill color.

Logical Groups tab


- Select the Logical Groups that will be associated with the map region.

3.1.1.2 Draw a polygonal region by coordinates

- Click  and choose **Specify coordinates**.

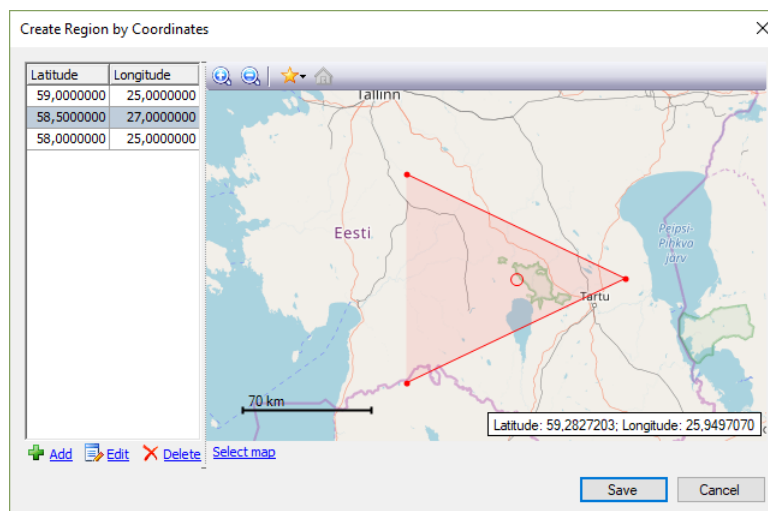


- Click the **Add** link to add a point.

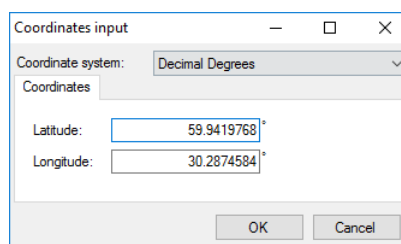


- **Coordinate system**
From the drop-down list, select the convenient format (for example, Decimal Degrees) for the coordinates.
- **Latitude/Longitude**
Enter the coordinates of the point.
- Click **OK** to add the point.
- Click the **Edit** link to edit the selected point.
- Click the **Delete** link to delete the selected point.
- Once finished editing the region's points, click the **Save** button.

3.1.2 Drawing a Circular Region

3.1.2.1 Draw a circular region manually

- Click  and choose **Draw on the map**.

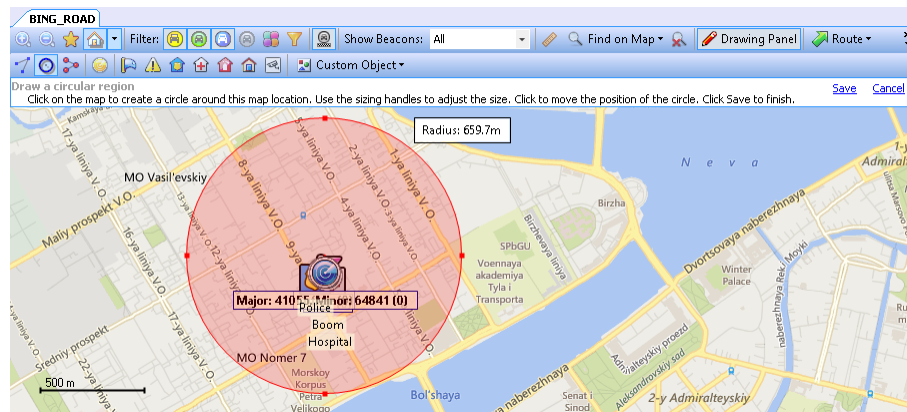

- Click on the map to place the center of the region. Drag the sizing handles to adjust the radius of the region. To change the center position of the region, click another place on the map.
- Once finished, click the **Save** link.

In the **Object on Map** dialog box that opens, specify the following parameters:

General tab

- **Name**
Specify a name for the map region.
- **ID**
Enter the ID of the map region.
- **Description**
Enter a description for the map region.


Region tab

- **Color**
Select a color to display the region on the map.
- **Fill region area**
Select this check box to fill in the region area on the map.
- **Transparency**
Specify the transparency level (in percent) for the fill color.


Logical Groups tab

- Select the Logical Groups that will be associated with the map region.

3.1.2.2 Draw a circular region by coordinates

- Click  and choose **Specify coordinates**.

In the **Circular Region** dialog box, specify the following parameters:

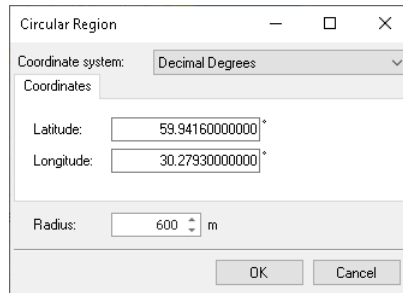

Circular Region

Coordinate system: Decimal Degrees

Coordinates

Latitude: 59.941600000000°


Longitude: 30.279300000000°


Radius: 600 m

OK Cancel


- **Coordinate system**
From the drop-down list, select the convenient format (for example, Decimal Degrees) for the coordinates.
- **Latitude/Longitude**
Enter the coordinates of the circle's center.
- **Radius**
Enter the radius of the circle.

3.1.3 Drawing a Route

- Click  and then set route points one after another by clicking on the map.

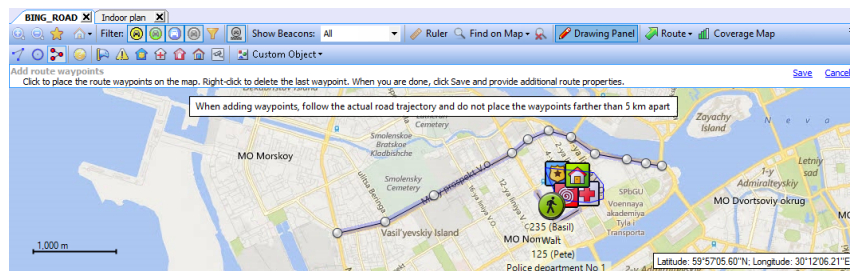


- Once you have finished drawing a route, click the **Save** link.
In the **Object on Map** dialog box, specify a name and description for the route.
 - Click the **Route** tab.

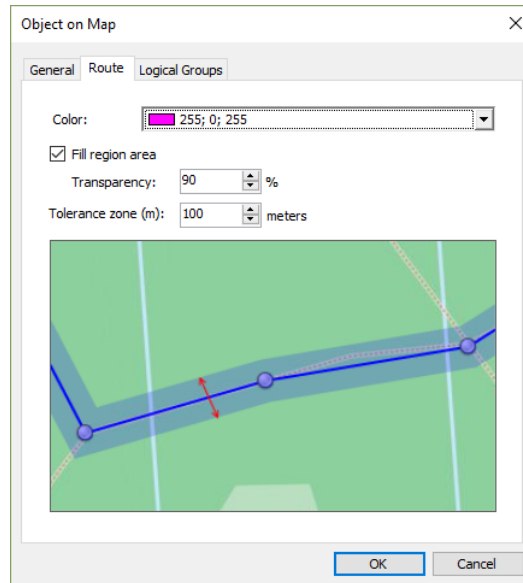


- **Color**
Select the color in which to display the route on the map.
- **Fill region area**
Select this check box to display a transparent edge around the route line. The edge width is specified by the value of the **Tolerance zone** parameter.
 - **Transparency**
Specify the transparency, in percent, for the line edge.
- **Tolerance zone**
Specify the corridor width, in meters. If a radio will pass out of this tolerance zone, the dispatcher will receive an alarm signal.

3.2 Defining Geofencing Rules

- Click **Administration, Tasks** (1), and double-click **Geofencing** (2) in the **Tasks** pane.

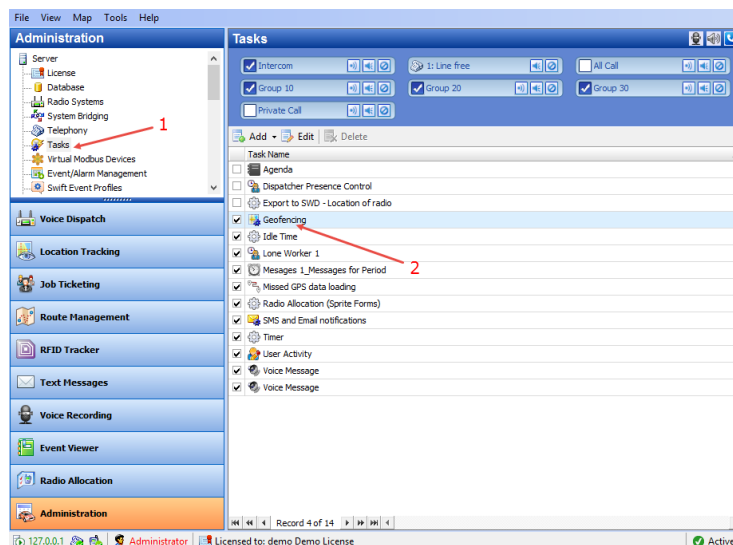

The administrator can **add/disable/delete** the rules for Geofencing as well as edit the currently selected rules:

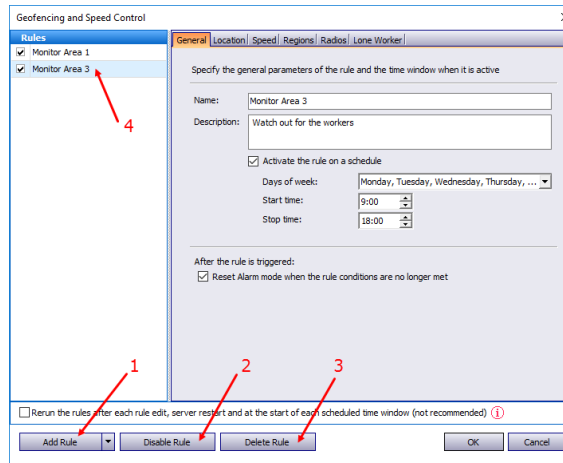


- Click the **Add Rule** button (1) and select the appropriate rule from the drop-down list (Map Region, Beacons, Radios, Lone Worker) to add a rule to the current Geofencing configuration. A new rule will be displayed in the list of rules (4).
- Click the **Disable rule** button (2) to disable the selected rule.
- Click the **Delete rule** button (3) to delete the selected rule.

General tab

- **Name**
Specify the rule name.
- **Description**
Add a description of the rule.
- **Run the rule on a schedule**
Select this option and in the boxes below specify the schedule for the rule to run.
 - **Days of week**
In the drop-down list, select the days of the week on which to run the Geofencing rule.
 - **Start time**
Specify the time at which to activate the rule.
 - **Stop time**
Set the time at which to deactivate the rule.
- **Reset Alarm mode when the rule conditions are no longer met**
Select this option to reset Alarm mode after the rule is triggered.

Location tab

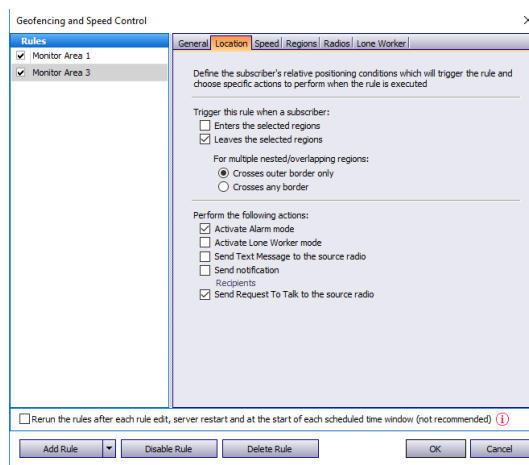

Trigger this rule when a subscriber:

- **Enters the selected regions**
Select this option so that the rule will be triggered as soon as a subscriber enters the selected region.
- **Leaves the selected regions**
Select this option so that the rule will be triggered as soon as a subscriber leaves the selected region.

For multiple nested/overlapping regions


Choose one of the options specifying for multiple regions whether to consider only outer border of the group of regions, or any border of a region within the group.

Perform the following actions:

Here you specify which actions to execute when the rule is triggered.

- **Activate Alarm mode**
Select this option to activate an Alarm mode in the Dispatch Console.
- **Activate Lone Worker mode**
Select this option to automatically activate a Lone Worker mode for the radio in case of entering or leaving the selected region.
- **Send Text Message to the source radio**
Select this option to automatically send a text message to the radio when it enters or leaves the selected region.
- **Send notification**
Select this option to send a notification when the radio enters or leaves the selected region. Click the **Recipients** link and specify the recipients to send the notification to.
- **Send Call Alert to the source radio**
Select this option to automatically send a call alert to the radio when it enters or leaves the selected region.


Speed tab

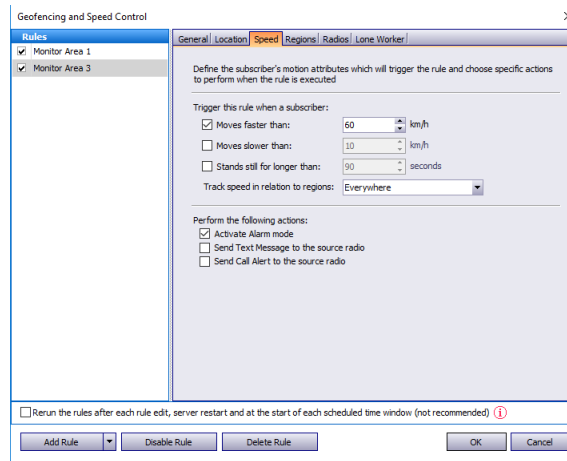

Trigger the rule when a subscriber:

- Moves faster than**
 Select this option and specify the maximum allowed speed for the vehicles. The rule will be triggered when the vehicle with the radio exceeds this speed limit.
- Moves slower than**
 Select this option and specify the minimum allowed speed for the vehicles. The rule will be triggered when the vehicle with the radio drops below the specified speed.
- Stands still for longer than**
 Select this option and specify the time period, in seconds, during which the vehicle is allowed to stand still. The rule will be triggered when the vehicle with the radio stands still for longer than this specified time period.
- Track speed in relation to regions**
 From the drop-down list, select where to track the speed of the vehicles: inside or outside the selected regions, or independently of the regions.


Regions tab

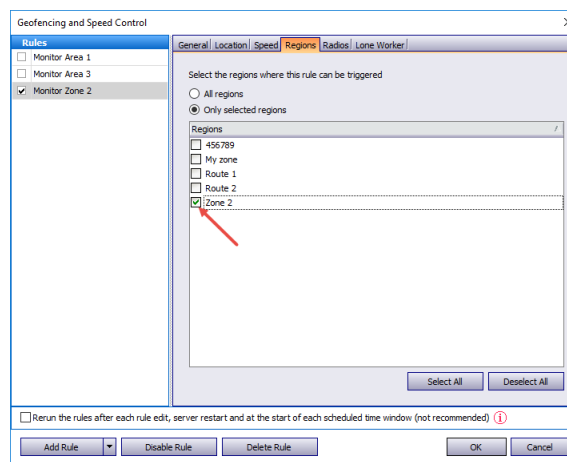


- All regions**
 Choose this option to apply this rule for all regions.


- **Only selected regions**
Choose this option to apply the rule for one or several regions.
- **Select all**
Click this button to select all regions in the list.
- **Deselect all**
Click this button to deselect all regions in the list.

Radios tab

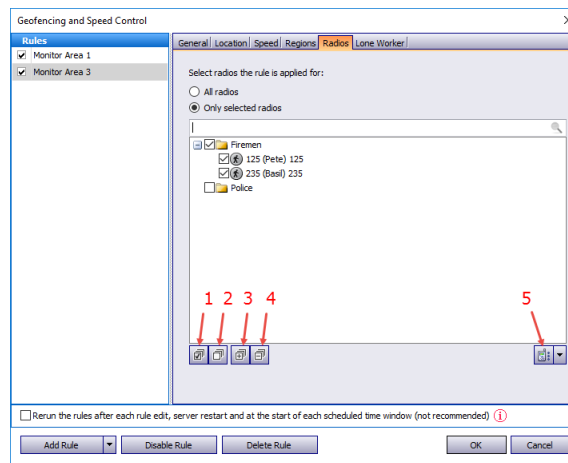

- **All radios**
Choose this option to apply this rule for all radios.
- **Only selected radios**
Choose this option to apply the rule for one or several radios.
- **Select all (1)**
Click this button to select all radios in the list.
- **Deselect all (2)**
Click this button to deselect all radios in the list.
- **Collapse all (3)**
Click this button to collapse the view of radios in the list.
- **Expand all (4)**
Click this button to expand the view of radios in the list.
-  (5)
Click this button, and from the drop-down menu, select which list to display: Radio List, Radio Groups, or Logical Groups.

Lone Worker tab

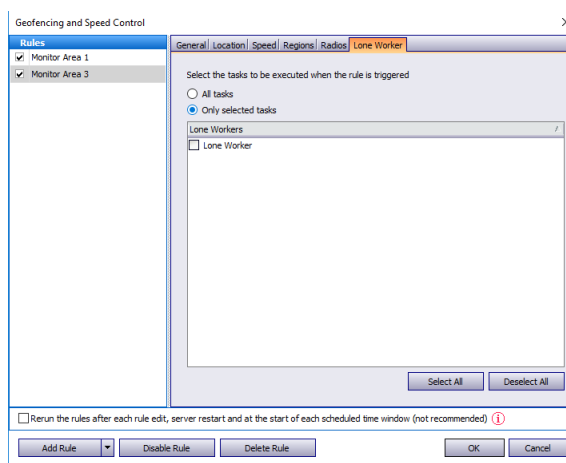

- All Tasks**
 Choose this option to execute all Lone Worker tasks configured by the administrator when the rule has been triggered.
- Only selected tasks**
 Choose this option, and in the list below, select the Lone Worker tasks to be executed when the rule has been triggered.

Variable settings for Geofencing rules of various types (Map Region, Beacons, Radios and Lone Worker) are represented in the table below:

Event type	Tab Name	Parameters Description
Common Settings	General	Name – specify the rule name; Description – add the rule description;
	Scheduler	Run the rule on a schedule - select to start a scheduler for Geofencing rules; Days of week - select the days of the week on which to activate the Geofencing rule; Start time - set the time at which to start the rule; Stop time - set the time at which to stop the rule.
	Radios	All radios – choose to apply this rule for all radios; Only selected radios – choose to apply the rule for one or several radios; Select all – click to select all radios in the list; Deselect all – click to deselect all radios in the list.

Event type	Tab Name	Parameters Description
<p>Map Region</p> <p>Allows configuring rules when a radio(s) enters or leaves the defined map region(s).</p>	General	<p>Regions Control – select to enable regions control;</p> <p>Control mode – select the control mode for regions in the dropdown list;</p> <p>Activate Alarm mode if the rule has been triggered – select to activate Alarm mode in the Dispatch Console if Regions Control rule has been triggered;</p> <p>Send Text Message to a radio if the rule has been triggered – select to inform radio subscriber if Regions Control rule has been triggered;</p> <p>Activate Lone Worker if the rule has been triggered – allows automatically activating a Lone Worker policy for a radio in case of entering or leaving exact region on map. Select to enable this option.</p> <p>Speed and Idle Control – select to enable speed and idle control;</p> <p>Control mode – select the control mode for speed and idle control in the dropdown list;</p> <p>Maximum Speed – set the maximum speed for radio;</p> <p>Maximum Idle Time – set the maximum idle time for radio;</p> <p>Activate Alarm mode if the rule has been triggered – select to activate Alarm mode in the Dispatch Console if Speed and Idle Control rule has been triggered</p> <p>Send Text Message to a radio if the rule has been triggered – select to inform radio subscriber if Speed and Idle Control rule has been triggered;</p> <p>Send Call Alert to a radio if the rule has been triggered – select to inform radio subscriber if the rule has been triggered;</p> <p>Reset Alarm mode if the rule is not triggered - select to inform radio subscriber if the rule has not been triggered.</p>
	Scheduler	See above.
	Regions. Select regions to apply the rule	<p>All regions – choose to apply this rule for all regions;</p> <p>Only selected regions – choose to apply the rule for one or several regions;</p> <p>Select all – click to select all regions in the list;</p> <p>Deselect all – click to deselect all regions in the list.</p>
	Radios	See above.
	Lone Worker. Enables Lone Worker when the rule has been triggered	<p>All Tasks – choose to apply all tasks configured by the administrator when the rule has been triggered;</p> <p>Only selected tasks – choose this option, and in the list below, select the Lone Worker tasks to be executed when the rule has been triggered.</p>

Event type	Tab Name	Parameters Description
Beacons. Allows configuring rules when a radio (s) enters or leaves the beacon coverage zone	General	Control mode: Control entering beacon coverage zone – select to enable the rule when a radio enters beacon coverage zone; Control leaving beacon coverage zone - select to enable the rule when a radio leaves beacon coverage zone; Activate Alarm mode if the rule has been triggered - select to activate Alarm mode in the Dispatch Console if Beacons rule has been triggered; Reset Alarm mode if the rule is not triggered – select to reset Alarm mode in the Dispatch Console automatically if the rule condition was not triggered (for example, when Control entering beacon coverage zone is selected and the radio enters the monitored coverage zone and then instantly leaves the zone, the alarm mode in the Dispatch Console will be reset automatically) Send Call Alert to a radio if the rule has been triggered – select to inform radio subscriber if the rule has been triggered; Send Text Message to a radio if the rule has been triggered – select to inform radio subscriber if Beacons rule has been triggered; Activate Lone Worker if the rule has been triggered – allows automatically activating a Lone Worker policy for a radio in case of entering or leaving beacon coverage zone. Select to enable this option.
	Scheduler	See above.
	Radios	See above.
	Beacons. Enables rule for selected beacons	All Beacons – choose to apply this rule for all beacons; Only selected beacons – choose to apply the rule for one or several beacons.
	Lone Worker	See above.

Event type	Tab Name	Parameters Description
<p>Radios.</p> <p>Allows using radio(s)1 as a map region and monitor when another radio(s) enters or leaves radio's coverage zone</p>	General	<p>Control mode:</p> <p>Control Entering Region – select to enable the rule when a radio enters the coverage zone associated with another radio;</p> <p>Control Leaving Region - select to enable the rule when a radio leaves the coverage zone associated with another radio;</p> <p>Activate Alarm mode if the rule has been triggered - select to activate Alarm mode in the Dispatch Console if Radios rule has been triggered;</p> <p>Reset Alarm mode if the rule is not triggered – select to reset Alarm mode in the Dispatch Console automatically if the rule condition was not triggered (for example, when Control Entering Region is selected and radio enters to the monitored coverage zone and then instantly leaves the zone, alarm mode in the Dispatch Console will be reset automatically)</p> <p>Send Text Message to a radio if the rule has been triggered – select to inform radio subscriber if Radios rule has been triggered;</p> <p>Send Call Alert to a radio if the rule has been triggered – select to inform radio subscriber if the rule has been triggered;</p> <p>Minimum distance between radios – specify the distance, in meters. When a distance is less than the selected value, the rule will be triggered according to the settings above.</p> <p>Color of region – select the radio coverage zone color.</p>
	Scheduler	See above.
	Regions	Select radio coverage zones the rule is applied for.
	Radios	See above.
<p>Lone Worker.</p> <p>Allows configuring scheduled Lone Worker tasks</p>	General	<p>Days of week - select the days of the week to activate the Lone Worker rule.</p> <p>Start time - set the time to start the rule;</p> <p>Stop time - set the time to stop the rule.</p>
	Radios	See above.
	Lone Worker	<p>Select all configured by Administrator Lone Worker tasks or several configured tasks.</p> <p>When a Lone Worker task is mentioned as Disabled, the administrator should enable the task.</p>

3.3 Activating Geofencing Rules

- To activate the **Geofencing** task, in the **Tasks** pane, select the check box next to the task name.